LM-81LX

REED INSTRUMENTS



Instruction Manual

www.GlobalTestSupply.com

sales@GlobalTestSupply.com

324

REED LM-81LX

Find Quality Products Online at:

Table of Contents

Introduction	. 2
Product Quality	. 2
Safety	. 3
Features	. 3
Included	. 3
Specifications	. 4
Instrument Description	. 5
Operating Instructions	. 6
Data Hold	. 6
Recording Maximum and Minimum Readings	. 6
Auto Power Off	. 6
Battery Replacement	
Accessories and Replacement Parts	
Applications	. 7
Product Care	. 7
Product Warranty	. 8
Product Disposal and Recycling	. 8
Product Support	. 8

Introduction

Thank you for purchasing your REED LM-81LX Light Meter. Please read the following instructions carefully before using your instrument. By following the steps outlined in this manual your meter will provide years of reliable service.

Product Quality

This product has been manufactured in an ISO 9001 facility and has been calibrated during the manufacturing process to meet stated product specifications. If a certificate of calibration is required please contact the nearest authorized REED distributor or authorized Service Center. Please note an additional fee for this service will apply.

Safety

Never attempt to repair or modify your instrument. Dismantling your product, other than for the purpose of replacing batteries, may cause damage that will not be covered under the manufacturer's warranty. Servicing should only be provided by an authorized service center.

Features

- · Easy to operate, compact design
- 5-digit LCD display
- Autoranging
- User selectable Lux/Footcandle measurements
- · Min/Max and data hold functions
- Zero adjustment button
- · Over range and low battery indicators


Included

- Wrist Strap
- Battery

Specifications

Measuring Ranges:	Lux: 0 to 20,000 Fc: 0 to 1,860
Accuracy:	±(5% rdg.+ 8 dgt)
Resolution:	0 to 2,200 Lux: 1 1,800 to 20,000 Lux: 10 Fc: 0.1
Response Time:	<1 second
Sensor Type:	Photo diode & color correction filter
Autoranging:	Yes
Display:	5-digit LCD
Data Hold:	Yes
Min:	Yes
Max:	Yes
Auto Zero:	Yes
Overrange Indicator:	Yes
Sampling Rate:	1 time/second
Internal Memory:	Yes
Auto Shut-Off:	Yes (after 10 minutes)
Low Battery Indicator:	Yes
Power Supply:	9V Battery
Product Certifications:	CE
Operating Temperature:	32 to 122°F (0 to 50°C)
Storage Temperature:	14 to 140°F (-10 to 60°C)
Operating Humidity Range:	10 to 80%
Dimensions:	6.1 x 2.4 x 1.3" (156 x 60 x 33mm)
Weight:	5.6oz (160g)

Instrument Description

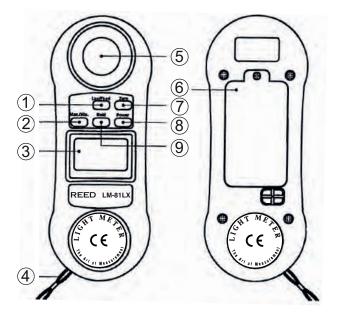

- 1. Lux/Ft-cd Button
- 2. MAX/MIN Button
- 3. LCD Display
- 4. Wrist Strap
- 5. Light Sensor

- 6. Battery Compartment/Cover
- 7. Zero Button
- 8. Power Button
- 9. Hold Button

Find Quality Products Online at:

www.GlobalTestSupply.com

sales@GlobalTestSupply.com

Operating Instructions

- 1. Turn the instrument on or off by pressing the **POWER** button.
- 2. Press the **Lux/Ft-cd** button to toggle between Lux and Foot Candles units of measurement.
- 3. When selected, face the Light Sensor under the light source.
- 4. When the readings are stable, note the measured value.

Data Hold

- 1. While taking a measurement, press the **HOLD** button to freeze the current readings on the display.
- 2. While in this mode a "HOLD" symbol will appear on the LCD.
- 3. Press the button again to resume normal operation.

Recording Maximum and Minimum Readings

- 1. Press the **MAX/MIN** button to enter recording mode as indicated by "REC" on the LCD. The meter will now begin recording maximum and minimum readings.
- 2. While in recording mode;
 - A) Press the MAX/MIN button once and the maximum value will appear on the display as indicated by "REC MAX" and will automatically update when new maximum data value is measured.
 - B) Press the MAX/MIN button again and the minimum value will appear on the display as indicated by "REC MIN" and will automatically update when new minimum data value is measured.
 - C) To exit recording mode and resume normal operation, press and hold the **MAX/MIN** button for two seconds.

Note: When in recording mode the **POWER** button is disabled and the meter cannot be turned off.

Auto Power Off

To preserve battery life, the meter is programmed to turn off after 10 minutes of inactivity.

Battery Replacement

When the low battery icon appears on the left corner of LCD display, you will need to replace the batteries. Remove the battery cover using a Phillips head screwdriver, insert a new 9V battery and secure the cover.

Accessories and Replacement Parts

CA-52A Soft Carrying Case

Don't see your part listed here? For a complete list of all accessories and replacement parts visit your product page on www.reedinstruments.com.

Applications

- OSHA work environment compliance
- · Cinematography and photography applications
- Museum exhibits
- Lighting system installation
- · Environmental monitoring
- Interior design projects
- · Industrial applications

Product Care

To keep your instrument in good working order we recommend the following:

- Store your product in a clean, dry place.
- Change the battery as needed.
- If your instrument isn't being used for a period of one month or longer please remove the battery.
- Clean your product and accessories with biodegradable cleaner. Do not spray the cleaner directly on the instrument. Use on external parts only.

Product Warranty

REED Instruments guarantees this instrument to be free of defects in material or workmanship for a period of one (1) year from date of shipment. During the warranty period, REED Instruments will repair or replace, at no charge, products or parts of a product that proves to be defective because of improper material or workmanship, under normal use and maintenance. REED Instruments total liability is limited to repair or replacement of the product. REED Instruments shall not be liable for damages to goods, property, or persons due to improper use or through attempts to utilize the instrument under conditions which exceed the designed capabilities. In order to begin the warranty service process, please contact us by phone at 1-877-849-2127 or by email at info@reedinstruments.com to discuss the claim and determine the appropriate steps to process the warranty.

Product Disposal and Recycling



Please follow local laws and regulations when disposing or recycling your instrument. Your product contains electronic components and must be disposed of separately from standard waste products.

Product Support

If you have any questions on your product, please contact your authorized REED distributor or REED Instruments Customer Service by phone at 1-877-849-2127 or by email at info@reedinstruments.com.

Please visit www.REEDINSTRUMENTS.com for the most up-to-date manuals, datasheets, product guides and software.

Product specifications subject to change without notice. All rights reserved. Any unauthorized copying or reproduction of this manual is strictly prohibited without prior written permission from REED Instruments.

REED INSTRUMENTS TEST & MEASURE WITH CONFIDENCE



CHECK OUT OUR LATEST PRODUCTS!

Find Quality Products Online at:

www.GlobalTestSupply.com

sales@GlobalTestSupply.com





Find Quality Products Online at:

www.GlobalTestSupply.com

sales@GlobalTestSupply.com